

SPL64 SPL84

SPL Play Loaded Enclosure

Thank you for purchasing this Bass Habit product. Please read this manual in order to understand how to get the best result from this product and ensure that the advices on how to look after the product and the safety precautions are followed. We hope you enjoy using the product as much as we enjoyed creating it.

DO NOT EXPOSE THIS PRODUCT TO EXCESSIVE DAMP OR MOISTURE

- Doing so may result in fire, shock or damage to the product.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE POSITIVE BATTERY TERMINAL

- Failure to do so may result in electric shock or injury.

ENSURE GOOD AND CORRECT CONNECTIONS

- Failure to make the correct connections may result in permanent damage to the product.

DO NOT USE ANY FUNCTIONS THAT MAY TAKE YOUR CONCENTRATION AWAY FROM DRIVING YOUR VEHICLE

- Do not set up your amplifier whilst driving. Doing so may result in an accident. For prolonged interaction with the product, make sure that your vehicle is stationary and parked in a safe location.

KEEP THE VOLUME AT A LEVEL SO YOU CAN STILL HEAR OUTSIDE NOISE

- Failure to do this may result in an accident. Bass Habit equipment is capable of producing sound levels that can permanently damage your hearing. Bass Habit recommends caution when listening at a high volume. For safety and enjoyable listening, the sound should be clear without distortion.

CAUTION

Never connect any speaker lead to the car chassi. This can cause severe damage to your car audio set up. Before drilling or cutting any holes, investigate the layout of your vehicle thoroughly.

Use caution when working near the fuel/hydraulic lines and electrical wiring.

Observe the correct polarity when wiring. Improper phasing may cause a loss of bass response.

Ensure that no moving parts catch on the speaker or grill (e.g. door handles or window glass inside the door).

WARRANTY

All Bass Habit products carry a full warranty depending on the conditions in the country where it is sold. The warrany is valid from the date of the original receipt as proof of purchase (warranty period differs depending on local warranty laws and policies). Contact your international Bass Habit dealer or distributor concerning specific procedure for your country's warranty policies.

WHAT IS NOT COVERED

- Damage to product due to improper installation.
- Subsequent damage to other components.
- Damage caused by exposure to moisture, excessive heat, chemical cleaners and/or UV radiation.
- Damage through negligence, missuse, accident or abuse. Repeated returns for the same fault may be considered as abuse.
- Any cost or expense related to the removal and/or abuse. Repeated returns for the same fault may be considered as abuse.
- Damage caused by amplifier clipping or distortion.
- Items repaired or modified by any unauthorised repair facility.
- Return shipping on non-defective items.
- Products returned without a return authorisation number.
- Damage to product due to use of sealant.

WARNING

Bass Habit equipment is capable of sound pressure levels that can cause permanent damage to your hearing and those around you. Please use common sense when listening to your audio system and practice safe sound.

INTERNATIONAL TECHNICAL ENQUIRIES

For international technical support please contact the distribution agent for your country.

INSTRUCTIONS

INSTALLATION EXPERIENCE

Installation of Bass Habit products may require experience with a variety of mechanical procedures including enclosure construction. This manual only provides general installation and operation instructions. If you have any reservations about your installation skills, please contact your local authorized Bass Habit dealer for help.

CHOOSING LOCATION FOR YOUR SPL LOADED ENCLOSURE


Choosing a good placement of your Bass Habit product will have the greatest effect of the sound quality of the system. There are many different considerations needed when choosing the location(s) that best meet your needs. The location(s) must be large enough for the enclosure to fit. Care is needed to ensure that the desired location will not affect either the mechanical or electrical operation of the vehicle.


INSTALLATION PRECAUTIONS

NOTE! Proceed only if you are a qualified installer, otherwise let your dealer do it.

- Always wear protective eyewear when using tools.
- Turn off all stereo and other electrical devices before you begin.
- Disconnect the (-) negative lead from your vehicle's battery.
- Never use force when installing a Bass Habit product.
- Locate all fuel lines, brake lines, oil lines and electrical cables when planning your installation.


WIRING DIAGRAM

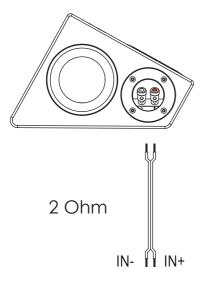

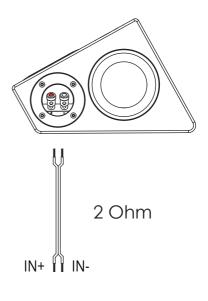


SPECIFICATION SPL64

Component	SPL Loaded Enclosure
Configuration	4xSP165M & 2xSP25A
RMS Power	360W
MAX Power	880W
Nominal Impedance	2+2 Ohm
Freq. Response	110Hz - 20Khz
Sensitivity	96 dB
Enclosure material	MDF
Enclosure type	Ported/ Fb 118 Hz
Enclosure volume	2x7L
Terminal	Single / 2 pcs
Dimension (LxWxH)	920x199x175/74 mm



SPECIFICATION SPL84

Component	SPL Loaded Enclosure
Configuration	4xSP200M & 2xSP25A
RMS Power	380W
MAX Power	960W
Nominal Impedance	2+2 Ohm
Freq. Response	80Hz - 20Khz
Sensitivity	97 dB
Enclosure material	MDF
Enclosure type	Ported/ Fb 85 Hz
Enclosure volume	2x12,8L
Terminal	Single / 2 pcs
Dimension (LxWxH)	1080x236x216/88 mm



DRIVER SPECIFICATIONS

Component	SP165 Midrange
Size	165mm (6,5")
RMS Power	70W
MAX Power	180W
Nominal Impedance	4 Ohm
Freq. Response	110Hz - 12Khz
Sensitivity	95 dB
Frame material	Steel
Cone material	Paper
Suspension material	Cloth
Magnet	Ferrite
Voice Coil Diameter	25mm (1")
Voice Coil Wire	Aluminium

Component	SP200 Midrange
Size	200mm (8")
RMS Power	75W
MAX Power	200W
Nominal Impedance	4 Ohm
Freq. Response	85Hz - 12Khz
Sensitivity	96 dB
Frame material	Steel
Cone material	Paper
Suspension material	Cloth
Magnet	Ferrite
Voice Coil Diameter	25mm (1")
Voice Coil Wire	Aluminium

DRIVER SPECIFICATIONS

Component	SP25A Bullet Tweeter
Size	25mm (1")
RMS Power	40W
MAX Power	80W
Nominal Impedance	4 Ohm
Freq. Response	2KHz - 20Khz
Sensitivity	100 dB
Frame material	Aluminium
Cone material	Aluminium
Magnet	Ferrite
Voice Coil Diameter	25mm (1")
Voice Coil Wire	Aluminium



The crossed-out wheelie bin symbol means that the product, literature and packaging included must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: dispose of them at a recycling point. For info on your nearest recycling point, check with your local waste authority.

Products marked with the RoHS symbol complies with the relevant provisions of the RoHS Directive for the European Union. In common with all Electrical and Electronic Equipment (EEE) the product should not be disposed of as household waste. Alsternative arrangements may apply in other jurisdictions.

The product with the CE mark indicates that it has passed the corresponding conformity assessment procedure and the manufacturer's declaration of conformity, and it complies with the relevant EU directives, and is used as a pass for the product to be allowed to enter the European Community market. Relevant directives require industrial products to be affixed with the CE mark. Those that do not have the CE mark shall not be marketed.

> Winn Scandinavia AB Adolfsbergsvägen 6, 702 27 Örebro Sweden

> > www.winnscandinavia.com

Winn Scandinavia reserves for possible typos, factual or numeric errors that may have been printed on any products, package designs, user manuals and/or other included accessories.

